




Deltronic

Användarmanual



261 FJÄRRKONTROLL

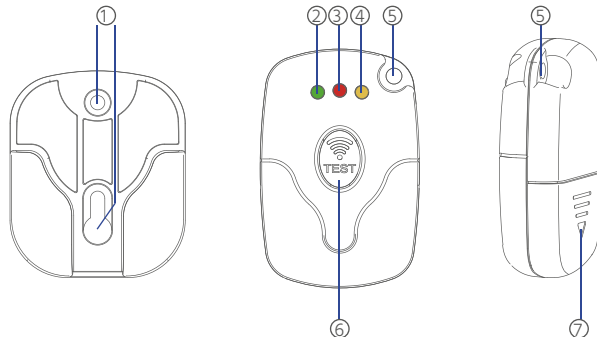

1. Montage hål
2. Normal LED
3. Alarm/Test/Paus LED
4. Lågt Batteri LED
5. Nyckelring
6. Test /Paus knapp
7. Batteri lock

Tänk på!



PRODUKTBEGRÄNSNINGAR: Den här enheten är endast avsedd för användning med kompatibel rök eller värmevarnare. Annan användning godkänns inte av Numens.

Specifikation

Standby indikering (låg strömförbrukning)	Blinkande grön LED var 40: e sekund
Larmläge	Blinkande röd LED och synkroniserad vibration var 1: a sekund
Testtillsänd	Blinkande röd LED var 1: a sekund
Pausläge	Blinkande röd LED var 6: e sekund
Förväntad batterilivslängd	5 år
Indikering för lågt batteri	Blinkande gul LED och synkroniserad vibrationer var 40: e sekund i 30 dagar
Radiosändarens tillgängliga frekvenser	433 MHz, 868 MHz, 915 MHz
Normal sändningslängd	30 m
Drifttemperatur	(0 ~ 50) ° C
Luftfuktighet	(10 ~ 95)% RH, icke-kondenserande

Sida 1

Funktioner

261 fjärrkontrollen fungerar tillsammans med kompatibla Numens bostadsrökalarm och värmealarm för att tillhandahålla test- och paus-funktioner utan att ha direkt tillgång till larmenheten. Det är idealiskt där åtkomst till larmenheten är svårt på grund av installations- höjden, eller där brukarna är begränsade i sin förmåga att nå detektorerna.



Normal läge

Normalt blinkar en grön LED var 30: e sekund.



Larm läge

När en brand upptäcks av ett kompatibelt rökalarm eller värmealarm, blinkar den röda lysdioden varje sekund och den interna vibratorn vibrerar.



Test läge

När ett kompatibelt rökalarm eller värmealarm är i testläge blinkar den röda lysdioden varannan sekund.



Hush Condition

När ett kompatibelt rökalarm eller värmealarm är i paus läge, blinkar den röda lysdioden varje sekund.



Lågt batteri

När det interna batteriet snart är tomt kommer den gula lysdioden att blinka varje sekund och den interna vibratorn vibrerar var 60: e sekund.

Installation

Installationsförberedelser

Utrustning

Innan installationen påbörjas, se till att all utrustning och verktyg för att montera och testa enheten är tillgängliga, till exempel verktyg, borrar och monteringskruvar.

Platsval i hem och lägenheter

Välj en bekväm plats för monteringshållaren så att fjärrkontrollen är lättillgänglig.

Batteri

Sätt i batteriet (medföljer) och kontrollera att den gröna lysdioden blinkar var 30: e sekund.

Installallera hållaren

Använd skruvarna för att installera hållaren på en horisontell väggyta.

Sida 3

2020-08-24



www.numens.com



www.deltronic.se



Manufacturer Numens
sales@numens.com



+86 574 82817218



9 Xizhao Road Innovative
Industrial Area Dong Qian Lake
Ningbo, Zhejiang, China 315121

Deltronic Security AB
order@deltronic.se

+46 31 140 800

EA Rosengrensgata 4
421 31 Västra Frölunda
Sverige

© 2018 Ambest Electronics (Ningbo) Co Ltd. All rights reserved. All specifications and other information shown were current at the date of publication and subject to change without notice.

Skapa grupp

- Gå in i gruppläge genom att trycka och släppa testknappen 5 gånger inom 5 sekunder.
Den interna vibratorm kommer att vibrera en gång och den röda lysdioden blinkar var 0,5: e sekund. Du är nu i gruppläge, konfigurationen kommer att pågå 50 sekunder (om inte tidigare avbrutits genom att trycka på testknappen en gång)
- För att lägga till en enhet i gruppen, tryck och släpp testknappen på den **andra** enheten två gånger inom 2 s. Den röda lysdioden blinkar en gång, den interna vibratorm vibrerar en gång, för att bekräfta anslutningen till gruppen.

Gå in i gruppläge



Tryck och släpp
5 gånger inom 5 sek



Blinkar var 0,5:e sekund
med vibration

Lägg till en enhet i gruppen



Tryck och släpp
två gånger inom 2 sek



Blinkar en gång
med vibration

Sida 4

- Upprepa steg 2 för att lägga till ytterligare enheter till gruppen.
5. När alla enheter är tillagda eller bortplockade från gruppen, tryck och släpp testknappen på första enheten för att avsluta gruppkonfigurations läget.

Ta bort enhet från gruppläge




Tryck och släpp
8 gånger inom 5 sek



Blinkar två gånger
med vibration

Avsluta gruppläge

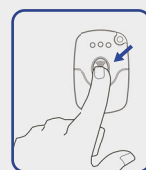

Tryck och släpp
testknappen



Enheten slutar att
blinka

Sida 5

Normal drift

Testa fjärrkontrollen

- Håll testknappen intryckt i 3 sekunder.
- Kontrollera att ljudet fungerar på det kompatibla röklarmet eller värmelarmet. Samt att lysdioden blinkar varje sekund.
- Kontrollera att den röda lysdioden blinkar varannan sekund och att enheten vibrerar.
- Släpp testknappen för att tystna larmet och återuppta normal drift.


Testa fjärrkontrollen



Tryck och håll ned i
mer än 3 sek



Lysdioden blinkar
var annan sekund

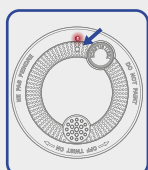

LED på varmare skall blinka
varje sekund (0,5 s på / 0,5 s av)

Sida 6

Paus (när det Larmar)



WARNING: Innan du använder paus funktionen ska du identifiera eventuell rök eller värmekälla och vara säker på att det råder säkra förhållanden.


Så om undersökning av varför larmsignalen ljuder orsakas av en känd källa (t.ex. vattenånga eller liknande) kan testknappen tryckas in för att tystna ljudet i 9 minuter.



Notera: Om rökdensiteten i röklarmet för tillfället är för hög, kommer inte pausfunktionen att tysta larmet (säkerhetsläge).

När paus tiden (9min) har gått återgår enheten till normal känslighet. Om rök fortfarande finns i rummet eller i detektorn, kommer larmet att aktiveras igen. Pausfunktionen kan användas upprepade gånger under tiden man vädrar ut röken.

Tysta ett larm

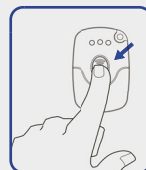

Tryck och släpp, det
kommer att pausa larmet



blinkar och vibrerar
var sjätte sekund

Sida 7

Vård och underhåll

Batteribyte

När batteriet börjat ta slut tar du bort batterilocket på fjärrkontrollens baksida. Byt ut batteriet till ett litium DC 3 V typ CR123A av god kvalitet, tillgängligt från de flesta el-handlare.

Service

För service eller reparation, returnera enheten intakt till Deltronic (se adressen i slutet av denna manual), med anledning till returen och information om eventuella fel, glöm inte ange er returadress. Ni kan hitta reparationsorder blanketter på vår hemsida. (Support)

Återvinning



Denna produkt är utformad för att fungera pålitligt i tio år efter installationsdatum. När denna tid har uppnåtts, kassera enheten på en av kommunen godkända återvinningscentraler.



Upplysning: Detta är ett viktigt dokument, behåll det under enhetens hela livslängd.

Sida 8

Produkt garanti

För att skydda dina rättigheter uppmanar vi till att du behåller det ursprungliga inköpskvittot som bevis för köp. Ingen garanti kan erbjudas utan det ursprungliga inköpskvittot.

Deltronic Security AB (Deltronic) garanterar dig som köpare, att röklarmet kommer att vara fritt från defekter i material, utförande eller konstruktion under normal användning under en period av: 2år.

Denna garanti kan inte överlåtas och gäller inte för utbytbara batterier. Vårt ansvar gentemot dig enligt denna garanti, är begränsad till att reparera eller byta ut delar som vi finner vara defekta i material, utförande eller design. Detta är kostnadsfritt för dig, tag kontakt med oss eller skicka in varan med felbeskrivning och bevis på inköpsdatum i ett brev eller paket med betald frakt till adressen nedan, vid utbytbara batterier bifoga dessa vid sidan om. Villkoren för denna garanti gäller inte under följande omständigheter: om röklarmet har modifierats, demonterats, förorenats, skadats, försatts eller på annat sätt missbrukats eller ändrats efter inköpsdatum eller om den inte fungerar på grund av felaktig placering/installation eller om skada orsakats av att de anvisade instruktionerna inte följts. Vi vill göra er uppmärksamma på att vi inte ersätter skador på enhet eller degradering i livslängd om röklarmet varit i larmläge en längre tid och/eller räddat egendom och liv.

Deltronic's ansvar, som härrör från försäljningen av detta röklarm eller enligt villkoren i denna garanti, får under inga omständigheter överstiga kostnaden för utbyte av densamma.

Deltronic är under inga omständigheter ansvarig för skada eller följdskada som uppstår på grund av att röklarmet fallerar att varna enligt denna eller någon annan garanti, uttryckligen eller underförstått eller för skador som orsakats av underlåtenhet att följa de anvisade instruktionerna. Denna garanti påverkar inte dina lagstadgade rättigheter.

Sida 9



User Manual



261 ALARM REMOTE CONTROL

Cautions



PRODUCT LIMITATIONS: This device is only for use with compatible residential smoke and heat alarm device. Other uses are not approved by Numens.

Specifications

Quiescent condition indicator	Flashing green LED every 40 s
Alarm condition	Flashing red LED and synchronised vibration every 1 s
Test condition	Flashing red LED every 1 s
Hush condition	Flashing red LED every 6 s
Expected battery life	5 years
Low battery indication	Flashing yellow LED and synchronised vibration every 40 s, for 30 days
Radio transmitter operating frequencies	433 MHz, 868 MHz, 915 MHz
Maximum operating distance (typical)	30 m
Operating temperature	(0 ~ +50) °C
Operating humidity	(10 ~ 95) % RH, non-condensing

Page 1

Features

The 261 alarm remote control operates in conjunction with compatible Numens residential smoke alarms and heat alarms to provide test and hush functions without having direct access to the alarm device. It is ideal where access to alarm devices is difficult due to installation height, or where residents are restricted in their ability to operate the functions.



Normal Operation

When operating normally, a green LED will flash every 30 s.



Alarm Condition

When a fire is detected by a compatible smoke alarm or heat alarm, the red LED will flash every 1 s and the internal vibrator will operate.



Test Condition

When a compatible smoke alarm or heat alarm is in the Test condition, the red LED will flash every 2 s.



Hush Condition

When a compatible smoke alarm or heat alarm is in the Hush condition, the red LED will flash every 1 s.



Low Battery Condition

When the internal battery is depleted, the yellow LED will flash every 1 s and the internal vibrator will operate every 60 s.

Page 2

Installation

Installation Preparation

Equipment

Before commencing installation, ensure all equipment and tools to mount and test the device are available, such as drills and mounting screws (supplied).

Location Selection in Homes and Apartments

Choose a convenient location for the mounting cradle so that the remote control is easily accessible.

Battery

Install the battery (supplied) and check that the green LED flashes every 30 s.

Install the Cradle

Use the screws provided to install the cradle onto a horizontal wall surface.

Page 3



www.numens.com



www.deltronic.se



Manufacturer Numens
sales@numens.com



+86 574 82817218



9 Xizhao Road Innovative
Industrial Area Dong Qian Lake
Ningbo, Zhejiang, China 315121

Deltronic Security AB
order@deltronic.se

+46 31 140 800

EA Rosengrensgata 4
421 31 Västra Frölunda
Sverige


© 2018 Ambest Electronics (Ningbo) Co Ltd. All rights reserved. All specifications and other information shown were current at the date of publication and subject to change without notice.

2020-08-24

Group Configuration

1. Enter Group mode by pressing and releasing the Test button 5 times within 5 s. The internal vibrator will vibrate one time and the red LED will flash every 0.5 s. Group mode configuration will last 50 s (unless cancelled earlier by press test button one time),
2. To add a unit to the group, press and release the Test button on the second unit twice within 2 s. The red LED will flash one time, the internal vibrator will vibrate one time to confirm connection to the Group.

Enter Group mode

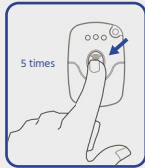

5 times

Press and release it 5 times within 5 s



Flash every 0.5 s and a short vibrate

Add a unite to the Group



2 times

Press and release it twice within 2 s



flash one time and a short vibrate

Page 4

3. Repeat Step 2 to add additional units to the Group.
4. To remove the Remote Control from the Group, press and release the Test button 8 times within 5 s. The sounder will emit two short beeps and the red LED will

flash twice to confirm removal from the Group.

5. When all units are added to the group, press and release the Test button on the first unit to end the Group configuration mode.

Remove from a Group



8 times

Press and release it 8 times within 5 s



flash twice and 2 short vibrates

End Group mode



Press and release it



flashes off

Page 5

Normal Operation

Test the Remote Control

1. Press and hold the Test button for 3 s.
2. Check the sounder operates on the compatible smoke alarm or heat alarm.
3. Check the red LED flashes every 2 s.
4. Release the Test button to silence the alarm and resume normal operation.

Test the Remote Control




Hold 3 s

Press and hold it more than 3 s



Flashes every 2 s

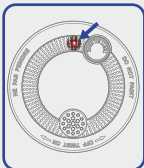

LED flashes every 1 s and sounder operates (0.5 s on / 0.5 s off)

Page 6

Hush (Alarm Condition)



WARNING : Before using the hush feature, identify the smoke or heat source and be certain that safe conditions exist.

If investigation of the alarm signal is likely caused by a known nuisance source (such as cooking fumes), the Test button can be pressed to silence the sounder for 9 min.



WARNING : If the smoke density of the smoke alarm is too high, the hush function will not silence the alarm sounder.

After the Hush time has expired, the device will return to normal sensitivity. If smoke is still present, the alarm will re-activate. The hush feature can be used repeatedly.

Silence the alarm



Press and release it will hush the alarm



flashes and vibrates every 6 s

Page 7

Care and Maintenance

Battery Replacement

Once the battery is depleted, remove the battery cover on the rear of the remote control. Replace the battery using Lithium DC 3 V type CR123A, available from most hardware stores.

Service

For service or repair, return the unit intact to the supplier or to Numens (see the address at the end of this manual), stating the reason for the return and details of any fault.

Disposal



This product is designed to work reliably for 10 years after the installation date and should not be disposed of as land-fill. Please dispose in an environmentally friendly manner.



WARNING: This is an important document. Retain it for the life of the device.

Page 8

Limited Warranty

In order to protect your rights, please retain the original purchase receipt for the proof of purchase. No warranty can be offered without the original purchase receipt.

Ambest Electronics (Ningbo) Co Ltd ("Numens"), warrants the enclosed product excluding any battery(ies), to be free from defects in materials and workmanship under normal use and service for a period of 1 year from date of purchase or 18 months from the date of manufacture, whichever is the lesser period. This LIMITED WARRANTY is the sole and exclusive warranty, express or implied for Numens products. No employee, agent, dealer or other person is authorized to alter, modify, expand or reduce the terms of this warranty or to make any other warranty on behalf of Numens.

Numens' obligation of this Warranty shall be limited to the repair or replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the Warranty Period. Products in need of repair should be returned, shipping prepaid, to Customer Service Department, Numens, 9 Xizhao Road, Innovative Industrial Area, Dong Qian Lake, Ningbo, Zhejiang, China 315121. Numens shall not be obligated to repair or replace units which are found to be in need of repair because of damage, unreasonable use, modifications, or alterations occurring after the date of purchase. The duration of any implied Warranty, including that of merchantability or fitness for any particular purpose, shall be limited to the period of 1 year commencing from the date of purchase. In no case shall Numens be liable for any consequential or incidental damages for breach of this or any other Warranty expressed or implied whatsoever, even if the loss or damage is caused by Numens' negligence or fault. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. Numens makes no warranty with respect to the batteries, expressed or implied, written or oral, including that of merchantability or fitness for any particular purpose.

Page 9